

1. Disconnect ground cable from battery.

2. **Gauges: oil pressure, fuel level and temperature.**

Connect voltage to "I" terminal.

Connect sender switch to "S" terminal.

Connect ground to "G" terminal.


3. **Meters**

Hourmeters: Ground (-) terminal (negative ground system). Apply voltage to (+) terminal.


Voltmeters: Connect voltage to "I" terminal. Ground "G" terminal (negative ground system).

Ammeters: Connect "S" terminal to battery. Connect "I" terminal to alternator/regulator (negative ground system).

4. Reconnect ground cable to battery.

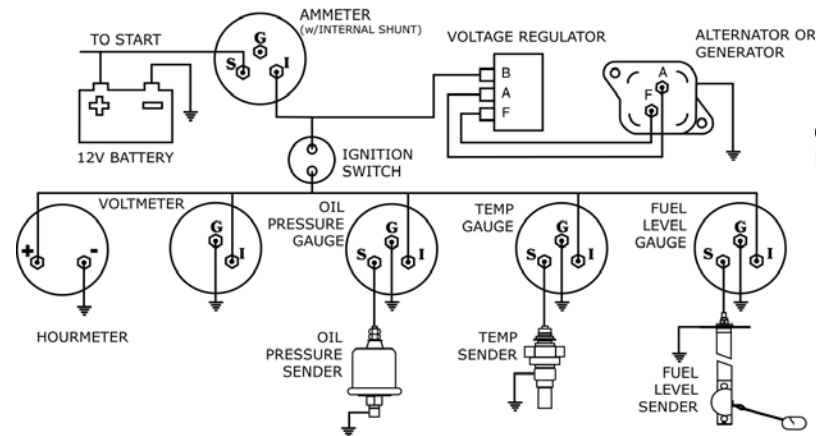

**GAUGES
CALIBRATED AT
ORIGINAL VOLTAGE
REGULATION OF
14V DC**

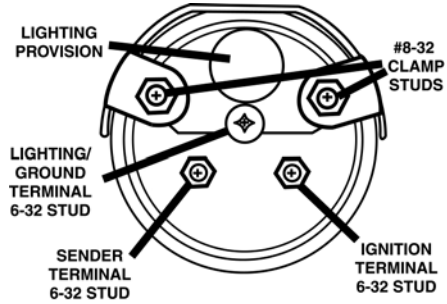

5. When connected, as shown, the pointers move when power is applied.



PO Box 128, East Petersburg, PA 17520
 Phone: 717-581-1000 FAX: 717-569-7247
 www.datcon.com or e-mail: techsup@datcon.com

Doc No: B-627 Revision: 02/08/01
 Prep by: A. Snyder Appd By: A. Snyder

**INSTALLATION
 INSTRUCTIONS
 FOR
 METERS, GAUGES &
 SENDERS**